


Spoiler mounting Instructions For '69 GTO



Top View

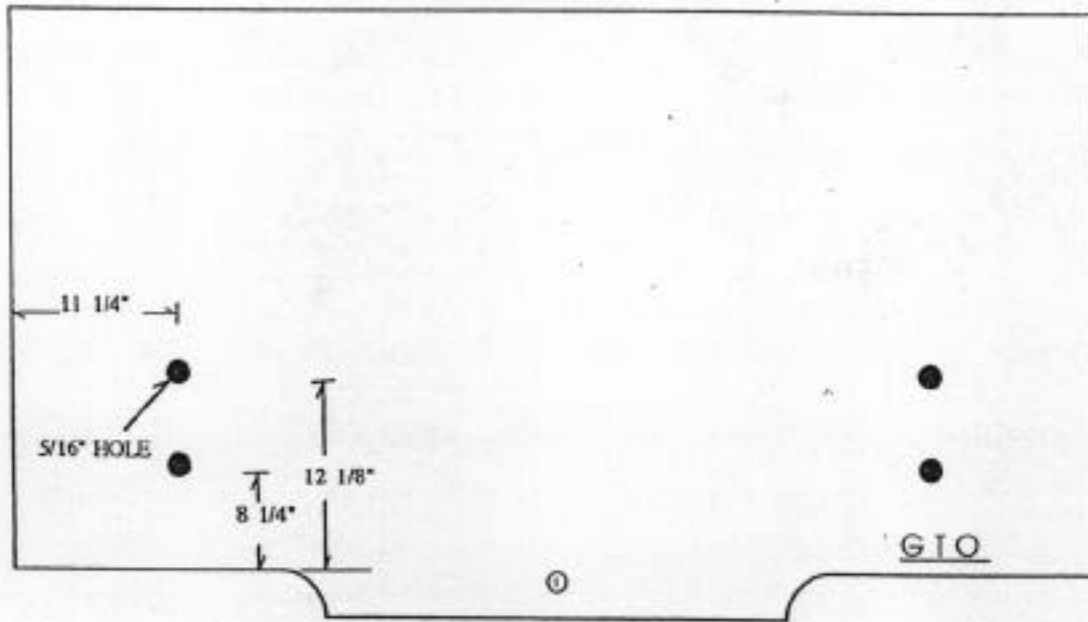

Measurements are taken using the edge of the decklid above the taillights as the starting point. Follow the contour of the decklid with a measuring tape to the correct dimension. Drill a $5/16''$ hole for the studs.

NOTE: You will need to drill a $1''$ hole in the understructure of the decklid to allow for a hex-nut to mount the spoiler. Use the $5/16''$ hole that you've drilled in the top as a pilot hole.

If you have any further questions, please call our tech line at (603)-876-4514

Thank You,

Ames Performance Engineering