


1970-72 GTO Spoiler Mounting Instructions

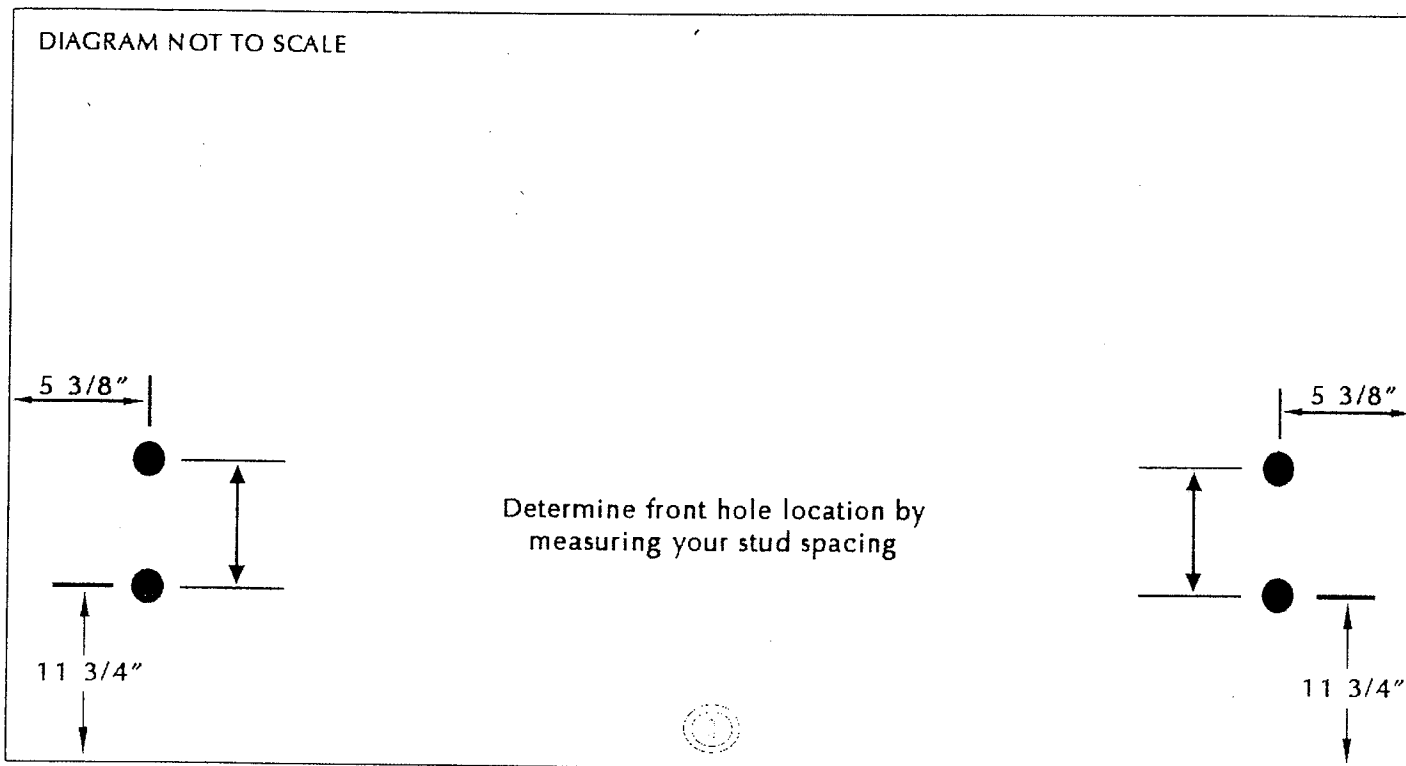

Measurements are taken using the edge of the deck lid above the taillights as the starting point. Follow the contour of the decklid with a measuring tape to the correct dimension. Drill 1/4" hole for the studs.

Use your spoiler stanchions to determine the location of the front holes by measuring the stud spacing. **If you have any further questions, please call our tech line at (800)421-2637**



Po Box 572 - 10 Pontiac Dr - Spofford, NH 03462
(800)421-2637 - Fax: (603)363-7007